Home Decorators

Collection

HDC# 05854 MFG# TW-17850
PARSONS WALL MIRROR 30"Hx20"W WHITE

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

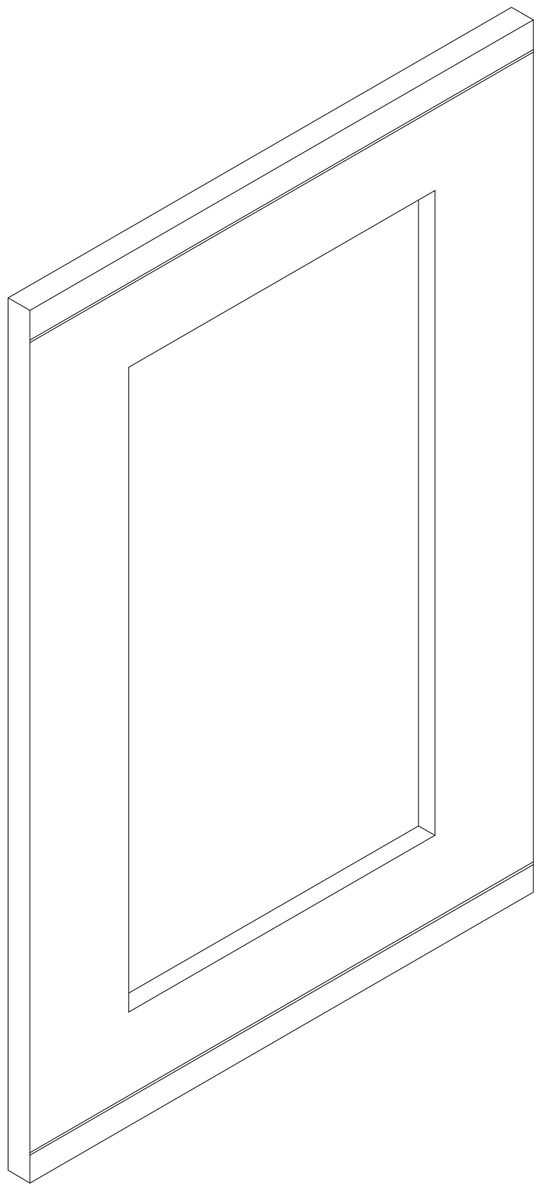

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

ASSEMBLY TOOLS REQUIRED

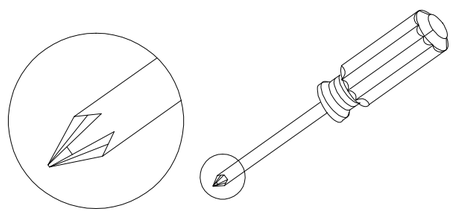

"+"Screw driver

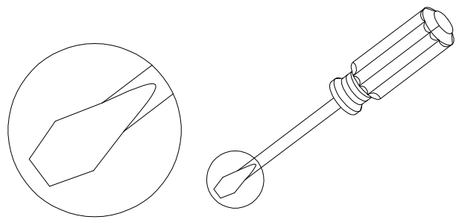

"-"Screw driver

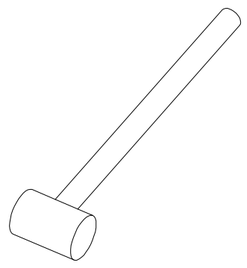

Rubber Mallet

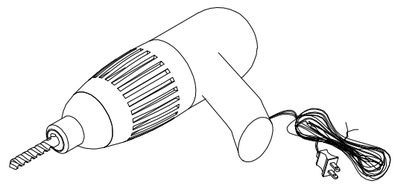

Electric drill

PARTS LIST

MIRROR 1PC 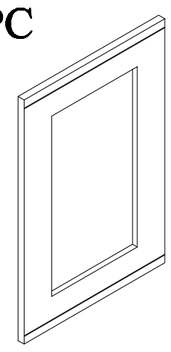 A	

HARDWARE LIST

GECKO & FLAT HEAD SCREW 2 SETS  (1)	

USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF WALL, INSERT THE 2 GECKOS INTO THE HOLES BY RUBBER MALLET, INSERT 2 FLAT HEAD SCREWS INTO 2 GECKOS AND HANG UP THE MIRROR ON THE WALL AS SHOWN.